



- Using oil can, lubricate all bearing seats of all control shafts, control levers, control linkage joints and cables.

- For vehicles **USA-version as from model year 1974** only the following grades of hydraulic oil may be used:


BP-Aero Hydraulik 1
Castrol DB Hydraulik Fluid
Esso Univers J-43
Mobil Aero HFA
Shell Aero Fluid 4

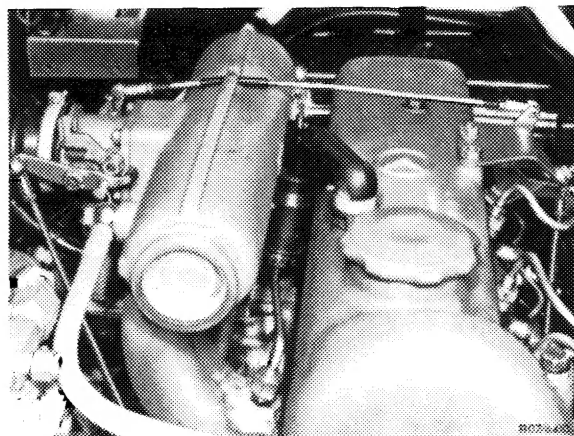


Diesel engines

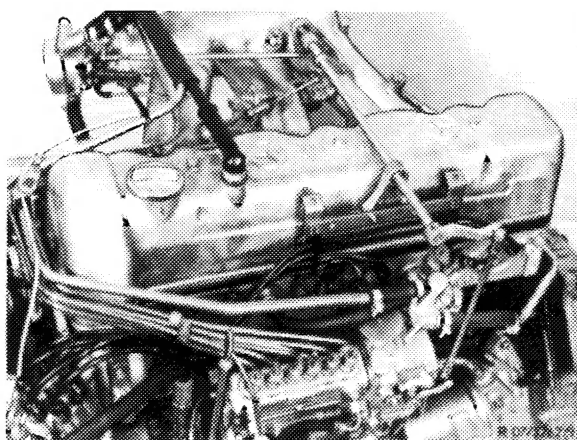


Engine 130.98

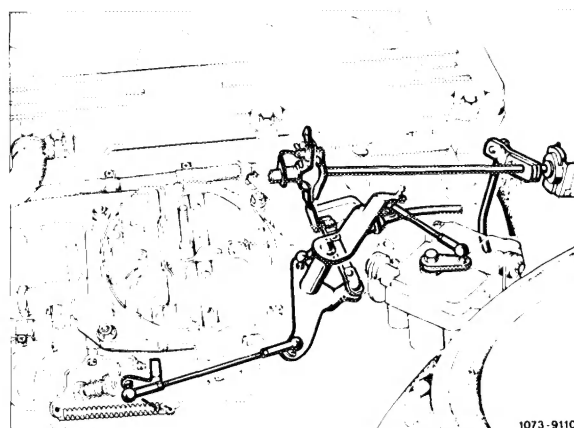

Engine 110 with carburetor

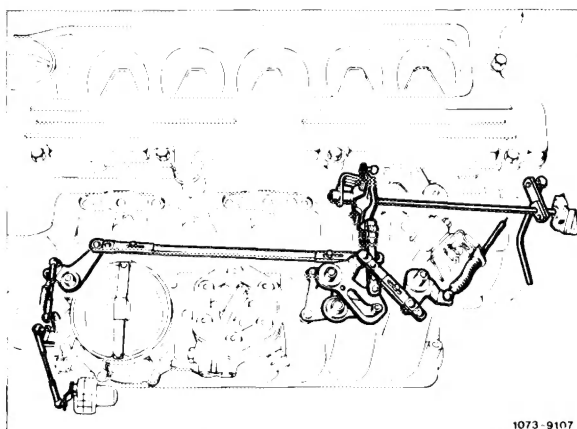

Engine 110 with CIS

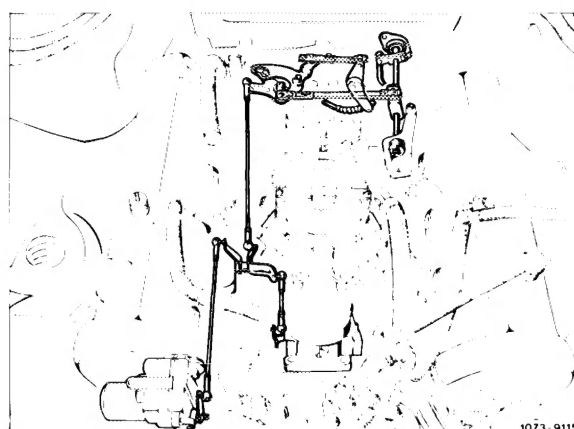

Engine 116, 117